


# *Table & Chairs Set*

Model Number: 79514

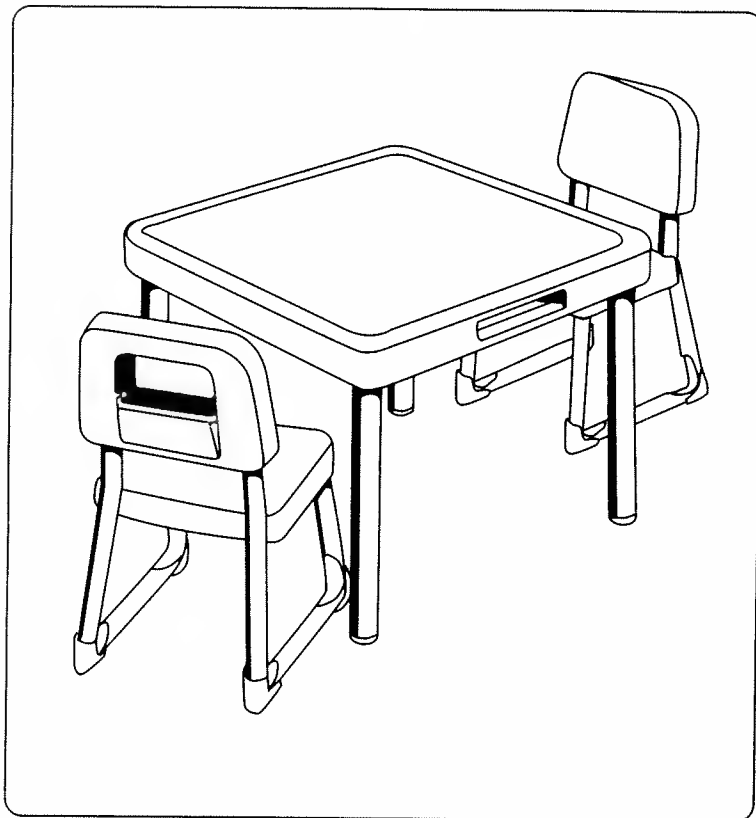

Please keep these instructions for future reference.

If you experience a problem with this product, are missing a part, or have any questions,  
please call us at **1-800-432-KIDS**, 8 AM - 6 PM EST

Monday through Friday, rather than return this product to the store.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver.





**CAUTION**

Please keep small parts, hardware and plastic bags out of children's reach.


# **Fisher-Price®**



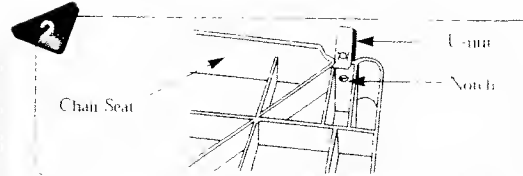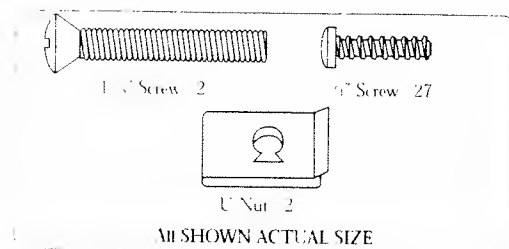


- Place the chain seat upside down on a flat surface.
- Push a u nut onto each notch on the rear of the chain seat. Make sure that the threaded side of the u nut is on the inside of the chain seat.

## Table Assembly

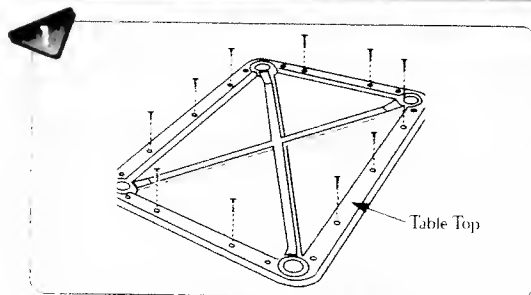


- Turn the table top upside down on a flat surface.
  - Insert ten 1/2" screws into the holes in the table top, as shown.
- Please Note:** There are two screws in each corner of the table top which are already in place.

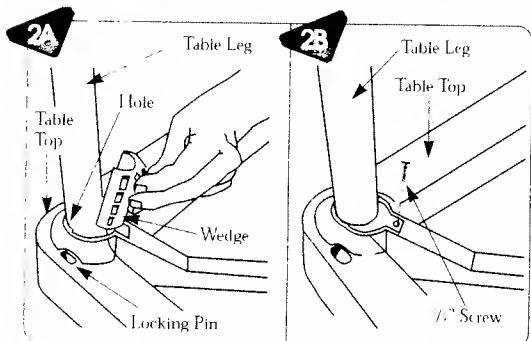


- Align the hole on a table leg with a locking pin in the table top and insert the leg into the table top.
  - Insert a wedge next to the table leg, as shown.
- Please Note:** Push the wedge down so that it is flush with the surface of the table top. This may require light tapping.
- Insert a 1/2" screw, as shown, and tighten with a Phillips screwdriver. Do not over-tighten.
  - Repeat this procedure to attach the other three table legs to the table top.


One-time assembly is now complete.

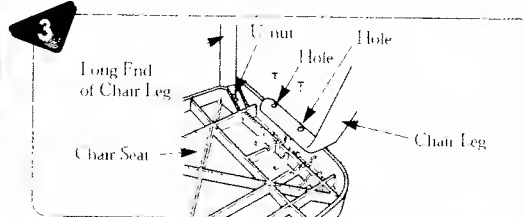

- Align the two holes on the chair leg with the two holes on the chair seat and the hole on the long end of the chair leg with the hole in the u nut.
- Insert a 1/4" screw through each hole in the chair leg and into the chair seat and tighten with a Phillips screwdriver. Do not over-tighten.
- Insert a 1/2" screw through the hole in the long end of the chair leg and into the u-nut and tighten with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to attach the other chair leg to the chair seat.

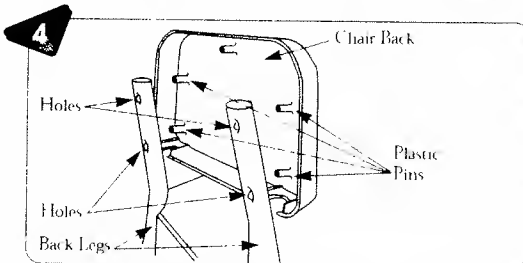


- Turn the chair upright.
- Insert the four plastic pins in the chair back into the holes in the back legs.

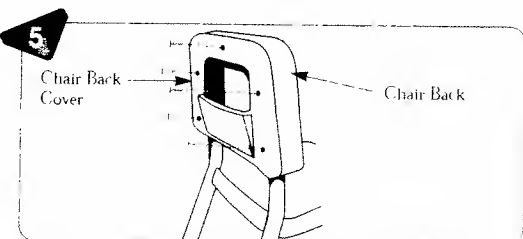

- Align the holes on the chair back cover with the plastic pins in the chair back.
- Insert a 1/2" screw into each of the five holes and tighten with a Phillips screwdriver. Do not over-tighten.

One-time assembly is now complete.

## Chair Assembly

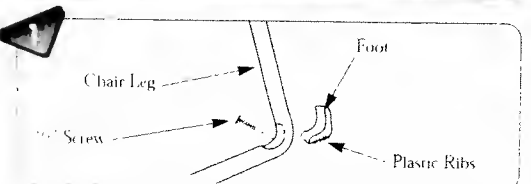

- Attach a foot to a chair leg so that the plastic ribs rest on the floor.
- Insert one 1/2" screw, as shown, and tighten with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to attach a foot to each of the other chair legs.

## Cleaning

The Table and Chairs Set can be cleaned with warm, soapy water or mild household cleaning agents. Harsh or abrasive cleaners should not be used.

**In Canada:** For more information, contact the manufacturer, Fisher Price, Inc., 1000 East 17th Avenue, Aurora, New York 14005.  
**In Great Britain:** For more information, contact the manufacturer, Fisher Price, Ltd., 1000 East 17th Avenue, Aurora, New York 14005.  
**In Australia:** For more information, contact the manufacturer, Fisher Price, Ltd., 1000 East 17th Avenue, Aurora, New York 14005.

